



www.musictech-midi.com  
e-mail: musictech@musictech-midi.com

**PRESET PERFORMANCE CHART**  
**TABELLA PERFORMANCE PRESET**

PLAY	BANK	NUMBER	RIGHT B	CC0	SOUND	VOL.	CHORD B	CC0	SOUND	VOL.	BASS B	CC0	SOUND	VOL.
1	5	0	000	032	BASSON	127	005	031	JAZZ GUITAR	045	032	000	ACOUSTIC BASS	080
		1	042	032	FISA OBOE	127	005	031	JAZZ GUITAR	045	032	000	ACOUSTIC BASS	080
		2	017	032	MUSETTE	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
		3	024	032	AMER-MUSETTE	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
		4	018	032	FRENCH-MUSETTE	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
	6	0	002	032	D-BASSON	127	005	031	JAZZ GUITAR	045	032	000	ACOUSTIC BASS	080
		1	040	032	FISA-ORGANO	127	005	031	JAZZ GUITAR	045	032	000	ACOUSTIC BASS	080
		2	008	032	HORN	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
		3	042	032	FISA OBOE	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
		4	024	032	AMER-MUSETTE	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
	7	0	026	032	CASSOTTO ROM.	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
		1	006	032	TUBA-FISA	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
		2	043	032	MASTER-ORGAN	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
		3	024	032	AMER-MUSETTE	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
		4	019	032	ITALIAN	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
	8	0	018	032	FRENCH-MUSETTE	127	005	031	JAZZ GUITAR	045	032	024	TUBA-BASS	080
		1	020	032	BRILLANT	127	005	031	JAZZ GUITAR	045	032	016	TUBA-BASS	080
		2	043	032	ORGANETTO	127	019	032	ITALIAN	040	019	031	BASS-SALTARELLO	060
		3	025	032	TANGOACC	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
		4	029	032	CLARINET	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
9	0	001	032	CASSOTTO	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080	
	1	010	032	HARMON	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080	
	2	007	032	ACCORD	127	005	031	JAZZ GUITAR	045	032	000	ACOUSTIC BASS	080	
	3	022	032	CELESTE	127	005	031	JAZZ GUITAR	045	032	000	ACOUSTIC BASS	080	
	4	029	032	CLARINET	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080	

**PRESET PERFORMANCE CHART**  
**TABELLA PERFORMANCE PRESET**

PLAY	BANK	NUMBER	RIGHT B	CC0	SOUND	VOL.	CHORD B	CC0	SOUND	VOL.	BASS B	CC0	SOUND	VOL.
2	5	0	016	013	DRAWBARS-ORG	127	005	031	JAZZ-GUITAR	045	032	000	ACOUSTIC-BASS	080
		1	016	025	LESLIE-ORG	127	005	031	JAZZ-GUITAR	045	032	000	ACOUSTIC-BASS	080
		2	017	016	JAZZ ORGAN	127	005	031	JAZZ-GUITAR	045	032	000	ACOUSTIC-BASS	080
		3	017	008	HAMMPERC-ORG	127	005	031	JAZZ-GUITAR	045	032	000	ACOUSTIC-BASS	080
		4	027	031	HAMMOND-ORGAN	127	005	031	JAZZ-GUITAR	045	032	000	ACOUSTIC-BASS	080
	6	0	024	000	SPANISH-GUITAR	127	024	000	SPANISH-GUITAR	045	024	000	SPANISH-GUITAR	080
		1	026	001	ELECT-GUITAR	127	048	000	STRIORG	045	032	000	ACOUSTIC-BASS	080
		2	030	000	DISTORTED-GUITAR	127	012	031	STRINGS	045	000	031	ELECTRIC-BASS	080
		3	025	016	MANDOLIN-1	127	048	000	STRIORG	045	048	000	STRIORG	090
		4	008	031	MANDOLIN-2	127	048	000	STRIORG	045	048	000	STRIORG	090
	7	0	040	000	VIOLIN-1	127	048	000	STRIORG	045	048	000	STRIORG	090
		1	040	008	VIOLIN-2	127	048	000	STRIORG	045	048	000	STRIORG	090
		2	048	000	STRIORG	127	048	000	STRIORG	045	048	000	STRIORG	090
		3	048	025	STRIFLUT	127	048	000	STRIORG	045	048	000	STRIORG	090
		4	052	000	CHOIR	127	048	000	STRIORG	045	048	000	STRIORG	090
	8	0	000	008	PIANO	127	000	008	PIANO	045	000	008	PIANO	060
		1	000	016	PIANO-STRING	127	012	031	STRINGS	045	012	031	STRINGS	080
		2	064	000	SAX-SOPRANO	127	004	031	EL-PIANO-STRINGS	050	032	000	ACOUSTIC-BASS	080
		3	065	016	SAX-ROMAGN	127	007	031	GUITAR-FOLK	050	032	000	ACOUSTIC-BASS	090
		4	071	008	CLARINET	127	026	000	ELECT-GUITAR	045	032	016	ACOUS BASS RING	080
9	0	022	031	BANJO	127	026	000	ELECT-GUITAR	045	032	016	ACOUS BASS RING	080	
	1	057	008	TRUMPET	127	026	000	ELECT-GUITAR	045	032	016	ACOUS BASS RING	080	
	2	060	000	MUTED-TRUMPET	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080	
	3	072	000	PAN-FLUTE	127	005	031	JAZZ GUITAR	045	032	000	ACOUSTIC-BASS	080	
	4	068	000	OBOE	127	005	031	JAZZ GUITAR	045	032	000	ACOUSTIC-BASS	080	



www.musictech-midi.com  
e-mail: musictech@musictech-midi.com

**PRESET PERFORMANCE CHART**  
**TABELLA PERFORMANCE PRESET**

	BANK	NUMBER	RIGHT B	CC0	SOUND	VOL.	CHORD B	CC0	SOUND	VOL.	BASS B	CC0	SOUND	VOL.
3	5	0	000	032	BASSON	100	001	032	CASSOTTO	075	005	032	BANDON	100
		1	042	032	FISA OBOE	100	042	032	FISA OBOE	075	005	032	BANDON	100
		2	024	032	AMER-MUSETTE	100	001	032	CASSOTTO	075	005	032	BANDON	100
		3	019	032	ITALIAN	090	001	032	CASSOTTO	075	005	032	BANDON	100
		4	044	032	BANDONEON	100	002	031	PIANO	075	018	031	ACOUS-BASS-BAND	100
	6	0	019	000	CHURCH	110	019	000	CHURCH	090	019	000	CHURCH	110
		1	011	031	STRINGS-HORNS	127	012	031	STRINGS	100	021	031	VIOL-STRINGS	110
		2	040	000	VIOLIN	110	012	031	STRINGS	100	021	031	VIOL-STRINGS	110
		3	012	031	STRINGS	110	012	031	STRINGS	100	021	031	VIOL-STRINGS	110
		4	052	000	CHOIR	127	012	031	STRINGS	100	021	031	VIOL-STRINGS	110
	7	0	064	000	SAX-SOPRANO	110	012	031	STRINGS	070	032	000	ACOUSTIC BASS	110
		1	002	031	BRIGHT-PIANO	127	012	031	STRINGS	070	032	000	ACOUSTIC BASS	110
		2	004	031	EL-PIANO-STRINGS	127	012	031	STRINGS	070	032	000	ACOUSTIC BASS	110
		3	015	032	HARMONICA	100	012	031	STRINGS	070	032	000	ACOUSTIC BASS	90
		4	020	031	HARMONICA-STRIN	127	012	031	STRINGS	070	032	000	ACOUSTIC BASS	90
	8	0	005	031	JAZZ GUITAR	127	006	031	JAZ-GUIT-STRINGS	070	032	000	ACOUSTIC BASS	100
		1	026	001	ELECTRIC-GUITAR	127	006	031	JAZ-GUIT-STRINGS	070	032	000	ACOUSTIC BASS	100
		2	011	000	VIBES	127	005	031	JAZZ GUITAR	070	032	016	ACOUS BASS RING	100
		3	025	031	CLARINET	127	005	031	JAZZ GUITAR	070	032	016	ACOUS BASS RING	100
		4	060	000	MUTED-TRUMPET	127	005	031	JAZZ GUITAR	070	032	016	ACOUS BASS RING	100
9	0	010	031	SAX-TENORE-SOFT	127	005	031	JAZZ GUITAR	070	032	016	ACOUS BASS RING	100	
	1	028	016	SAX-ALTO	127	005	031	JAZZ GUITAR	070	032	016	ACOUS BASS RING	100	
	2	028	031	SAX-TENORE	127	005	031	JAZZ GUITAR	070	032	016	ACOUS BASS RING	100	
	3	023	031	SAX-BARITONO	127	005	031	JAZZ GUITAR	070	032	016	ACOUS BASS RING	100	
	4	001	031	BRASS	127	005	031	JAZZ GUITAR	070	032	016	ACOUS BASS RING	100	



www.musictech-midi.com  
e-mail: musictech@musictech-midi.com

## PRESET PERFORMANCE CHART TABELLA PERFORMACE PRESET

PERF. N°	RIGHT. B	CC0	SOUND	VOL.	CHORD. B	CC0	SOUND	VOL.	BASS. B	CC0	SOUND	VOL.
000	000	032	BASSON	127	005	031	JAZZ GUITAR	045	032	000	ACUSTIC BASS	080
001	042	032	FISA-OBOE	127	005	031	JAZZ GUITAR	045	032	000	ACUSTIC BASS	080
002	017	032	MUSETTE	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
003	024	032	AMER-MUSETTE	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
004	018	032	FRENCH-MUSETTE	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
005	002	032	D-BASSON	127	005	031	JAZZ GUITAR	045	032	000	ACUSTIC BASS	080
006	040	032	FISA-ORGANO	127	005	031	JAZZ GUITAR	045	032	000	ACUSTIC BASS	080
007	008	032	HORN	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
008	042	032	FISA-OBOE	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
009	024	032	AMER-MUSETTE	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
010	026	032	CASSOTTO ROM.	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
011	006	032	TUBA-FISA	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
012	043	032	MASTER-ORGAN	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
013	024	032	AMER-MUSETTE	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
014	019	032	ITALIAN	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
015	018	032	FRENCH-MUSETTE	127	005	031	JAZZ GUITAR	045	032	024	TUBA BASS	080
016	020	032	BRILLANT	127	005	031	JAZZ GUITAR	045	032	024	TUBA BASS	080
017	043	032	ORGANETTO	127	019	032	ITALIAN	040	019	031	BASS-SALTARELLO	060
018	025	032	TANGOACC	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
019	029	032	CLARINET	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
020	001	032	CASSOTTO	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
021	010	032	HARMON	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
022	007	032	ACCORD	127	005	031	JAZZ GUITAR	045	032	000	ACUSTIC BASS	080
023	022	032	CELESTE	127	005	031	JAZZ GUITAR	045	032	000	ACUSTIC BASS	080
024	029	032	CLARINET	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080

PERF. N°	RIGHT. B	CC0	SOUND	VOL.	CHORD. B	CC0	SOUND	VOL.	BASS. B	CC0	SOUND	VOL.
025	016	013	DRAWBARS-ORG	127	005	031	JAZZ GUITAR	045	032	000	ACUSTIC BASS	080
026	016	025	LESLIE-ORG	127	005	031	JAZZ GUITAR	045	032	000	ACUSTIC BASS	080
027	017	016	JAZZ ORGAN	127	005	031	JAZZ GUITAR	045	032	000	ACUSTIC BASS	080
028	017	008	HAMMPERC-ORG	127	005	031	JAZZ GUITAR	045	032	000	ACUSTIC BASS	080
029	027	031	HAMMOND-ORG	127	005	031	JAZZ GUITAR	045	032	000	ACUSTIC BASS	080
030	024	000	SPANISH-GUITAR	127	024	000	SPANISH-GUITAR	045	024	000	SPANISH-GUITAR	080
031	026	001	ELECT-GUITAR	127	048	000	STRIORG	045	032	000	ACUSTIC BASS	080
032	030	000	DISTORTED-GUITAR	127	012	031	STRINGS	045	000	031	ELECTRIC-BASS	080
033	025	016	MANDOLIN-1	127	048	000	STRIORG	045	048	000	STRIORG	090
034	008	031	MANDOLIN-2	127	048	000	STRIORG	045	048	000	STRIORG	090
035	040	000	VIOLIN-1	127	048	000	STRIORG	045	048	000	STRIORG	090
036	040	008	VIOLIN-2	127	048	000	STRIORG	045	048	000	STRIORG	090
037	048	000	STRIORG	127	048	000	STRIORG	045	048	000	STRIORG	090
038	048	025	STRIFLUT	127	048	000	STRIORG	045	048	000	STRIORG	090
039	052	000	CHOIR	127	048	000	STRIORG	045	048	000	STRIORG	090
040	000	008	PIANO	127	000	008	PIANO	045	000	008	PIANO	060
041	000	016	PIANO-STRING	127	012	031	STRINGS	045	012	031	STRINGS	080
042	064	000	SAX-SOPRANO	127	004	031	EL-PIANO-STRINGS	050	032	000	ACUSTIC BASS	080
043	065	016	SAX-ROMAGN	127	007	031	GUITAR-FOLK	050	032	000	ACUSTIC BASS	090
044	071	008	CLARINET	127	026	000	ELECT-GUITAR	045	032	016	ACOUS BASS RING	080
045	022	031	BANJO	127	026	000	ELECT-GUITAR	045	032	016	ACOUS BASS RING	080
046	057	008	TRUMPET	127	026	000	ELECT-GUITAR	045	032	016	ACOUS BASS RING	080
047	060	000	MUTED-TRUMPET	127	005	031	JAZZ GUITAR	045	032	016	ACOUS BASS RING	080
048	072	000	PAN-FLUTE	127	005	031	JAZZ GUITAR	045	032	000	ACUSTIC BASS	080
049	068	000	OBOE	127	005	031	JAZZ GUITAR	045	032	000	ACUSTIC BASS	080
050	000	032	BASSON	100	001	032	CASSOTTO	075	005	032	BANDON	100
051	042	032	FISA-OBOE	100	042	032	FISA-OBOE	075	005	032	BANDON	100
052	024	032	AMER-MUSETTE	100	001	032	CASSOTTO	075	005	032	BANDON	100
053	019	032	ITALIAN	090	001	032	CASSOTTO	075	005	032	BANDON	100
054	044	032	BANDONEON	100	002	031	PIANO	075	018	031	ACOUS-BASS-BAND	100
055	019	000	CHURCH	110	019	000	CHURCH	090	019	000	CHURCH	110
056	011	031	STRINGS-HORNS	127	012	031	STRINGS	100	021	031	VIOL-STRINGS	110
057	040	000	VIOLIN	110	012	031	STRINGS	100	021	031	VIOL-STRINGS	110
058	012	031	STRINGS	110	012	031	STRINGS	100	021	031	VIOL-STRINGS	110
059	052	000	CHOIR	127	012	031	STRINGS	100	021	031	VIOL-STRINGS	110
060	064	000	SAX-SOPRANO	110	012	031	STRINGS	070	032	000	ACUSTIC BASS	110
061	002	031	BRIGHT-PIANO	127	012	031	STRINGS	070	032	000	ACUSTIC BASS	110
062	004	031	EL-PIANO-STRINGS	127	012	031	STRINGS	070	032	000	ACUSTIC BASS	110
063	015	032	HARMONICA	100	012	031	STRINGS	070	032	000	ACUSTIC BASS	090
064	020	031	HARMONICA-STRIN	127	012	031	STRINGS	070	032	000	ACUSTIC BASS	090
065	005	031	JAZZ-GUITAR	127	006	031	JAZ-GUIT-STRINGS	070	032	000	ACUSTIC BASS	100
066	026	001	ELECTRIC-GUITAR	127	006	031	JAZ-GUIT-STRINGS	070	032	000	ACUSTIC BASS	100
067	011	000	VIBES	127	005	031	JAZZ GUITAR	070	032	016	ACOUS BASS RING	100
068	025	031	CLARINET	127	005	031	JAZZ GUITAR	070	032	016	ACOUS BASS RING	100
069	060	000	MUTED-TRUMPET	127	005	031	JAZZ GUITAR	070	032	016	ACOUS BASS RING	100
070	010	031	SAX-TENORE-SOFT	127	005	031	JAZZ GUITAR	070	032	016	ACOUS BASS RING	100
071	028	016	SAX-ALTO	127	005	031	JAZZ GUITAR	070	032	016	ACOUS BASS RING	100
072	028	031	SAX-TENORE	127	005	031	JAZZ GUITAR	070	032	016	ACOUS BASS RING	100
073	023	031	SAX-BARITONO	127	005	031	JAZZ GUITAR	070	032	016	ACOUS BASS RING	100
074	001	031	BRASS	127	005	031	JAZZ GUITAR	070	032	016	ACOUS BASS RING	100